

Step 5

Direction of rotation

The correct direction of rotation is important, especially for belt driven installations.

Please use this illustration to identify whether the pump should be run counterclockwise or clockwise.

The pump can be connected direct or through belt transmission.

For belt transmission, it must be ensured that the permissible radial force is not exceeded.

See specifications for the specific pump.

CCW means: Counterclockwise
CW means: Clockwise

